



Fortinet Rack Mount Tray

SP-RACKTRAY-02

QuickStart Guide

Device Compatibility

Model	Type	Supported Devices
FortiGate 30D, 30D-POE	Tray Mount (Plastic Housing)	2
FortiGate 30E	Adapter Bracket	2
FortiGate 40F	Adapter Bracket	2
FortiGate 50E/51E	Adapter Bracket	2
FortiGate 50G/51G*, 50G-DSL*, 50G-SFP*, 50G/51G-SFP-POE*	Adapter Bracket	2
FortiGate 60D, 60D-POE	Adapter Bracket	2
FortiGate 60E/61E, 60E-POE	Adapter Bracket	2
FortiGate 60F/61F	Adapter Bracket	2
FortiGate Rugged 60F	Tray Mount	2
FortiGate 70D, 70D-POE	Tray Mount	1
FortiGate 70F/71F	Adapter Bracket	2
FortiGate 70G/71G*	Adapter Bracket	2
FortiGate 80D	Tray Mount	1
FortiGate 80E/81E, 80E/81E-POE	Adapter Bracket	2
FortiGate 80F/81F/-Bypass	Adapter Bracket	2
FortiGate 90D, 90D-POE	Tray Mount	1
FortiGate 90E/91E, 90E-POE	Tray Mount	1
FortiDeceptor 100G	Adapter Bracket	2
FortiGate 90G/91G*	Adapter Bracket	2
FortiSwitch 108F	Adapter Bracket	2
FortiTelemetry 100G	Adapter Bracket	2
FortiVoice Enterprise 100E	Tray Mount	1

*Remove rubber feet from FortiGate G-series devices before mounting on the adapter bracket. G-series devices may cause the rack mount tray to exceed 1U in height.



July 29, 2025

Copyright © 2025 Fortinet, Inc. All rights reserved. Fortinet®, FortiGate®, FortiCare® and FortiGuard®, and certain other marks are registered trademarks of Fortinet, Inc., and other Fortinet names herein may also be registered and/or common law trademarks of Fortinet. All other product or company names may be trademarks of their respective owners. Performance and other metrics contained herein were attained in internal lab tests under ideal conditions, and actual performance and other results may vary. Network variables, different network environments and other conditions may affect performance results. Nothing herein represents any binding commitment by Fortinet, and Fortinet disclaims all warranties, whether express or implied, except to the extent Fortinet enters a binding written contract, signed by Fortinet's Chief Legal Officer, with a purchaser that expressly warrants that the identified product will perform according to certain expressly-identified performance metrics and, in such event, only the specific performance metrics expressly identified in such binding written contract shall be binding on Fortinet. For absolute clarity, any such warranty will be limited to performance in the same ideal conditions as in Fortinet's internal lab tests. Fortinet disclaims in full any covenants, representations, and guarantees pursuant hereto, whether express or implied. Fortinet reserves the right to change, modify, transfer, or otherwise revise this publication without notice, and the most current version of the publication shall be applicable.

For Product License Agreement / EULA and Warranty Terms, visit <https://www.fortinet.com/content/dam/fortinet/assets/legal/EULA.pdf>

The Essentials

Admin Guide

For getting started guides, setup and configuration information, refer to the Admin Guides on <https://docs.fortinet.com/>

Customer Service

For contracts, licensing, product registration and account management, contact FortiCare Support at <https://www.fortinet.com/support/contact>

Self-service Resources

Access our knowledge base, forums, videos and technical experts at <https://www.fortinet.com/support/support-services/forticare-support>

Thank you for choosing Fortinet


Package Contents

Fortinet Rack Mount Tray


SP-RACKTRAY-02



QuickStart Guide

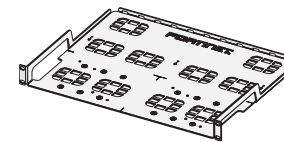

Fortinet Rack Mount Tray



2x Adapter Brackets



8x Cable Ties




2x Grounding Wires




20x Various Philips M3/M4 Screws



4x Hex Screws



8x Rubber Feet




4x Shoulder Screws

Installation


Before you begin, power off and disconnect the device; if rubber feet are attached, remove them.

Plastic Housing Devices

- 1 Attach three rubber feet next to the screw holes.

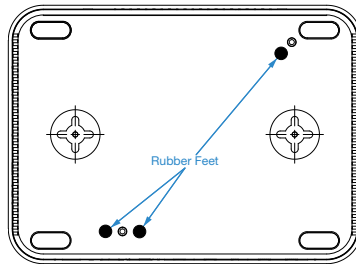


- 2 Secure device to the rack tray using two 8mm M3 flathead screws.

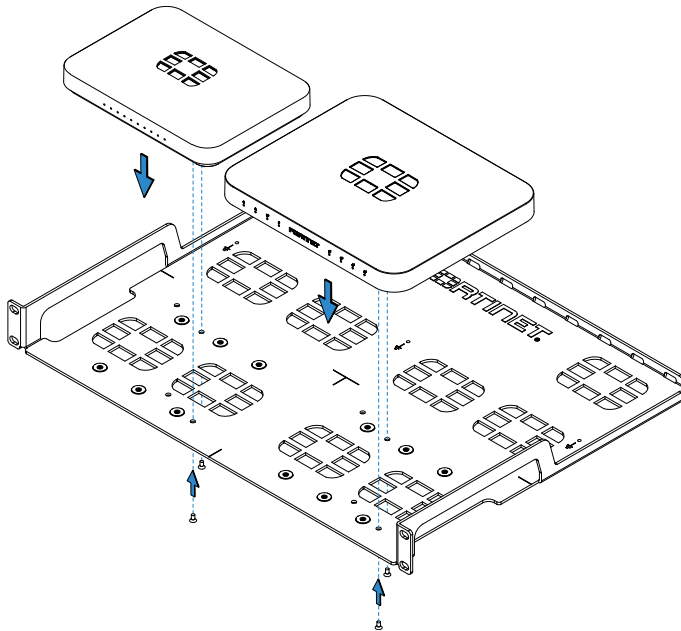

Tray Mount

- 1 Place device to one side of the tray above the tray magnets.
- 2 Attach provided grounding wire to the back of the device.

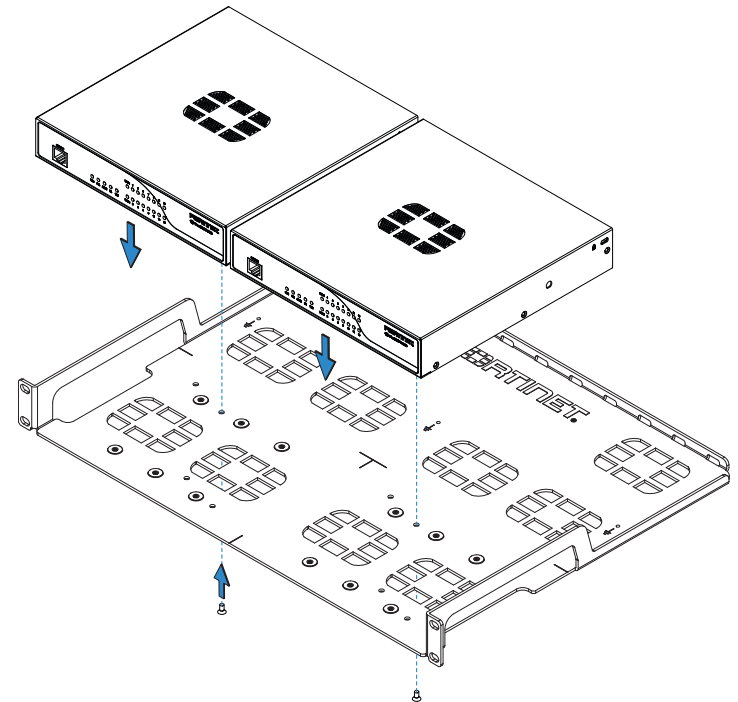

Optional: Secure device by using the provided 6mm M3 flathead screws or 3.5 M2.5 D4 shoulder slotted screws


Adapter Bracket

Before you begin, power off and disconnect the device. If applicable, remove the four 4mm M3 screws from the sides of the device.


The adapter bracket will not fit devices wider than 216mm (8.5in).

FortiGate G-series devices may cause the rack mount tray to exceed 1U in height.

- 1 Insert two hex screws into the bracket.

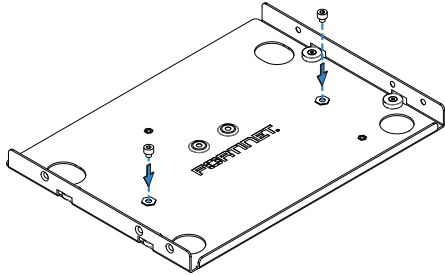


- 2 Place the device onto the adapter bracket, which uses magnets to secure the device.

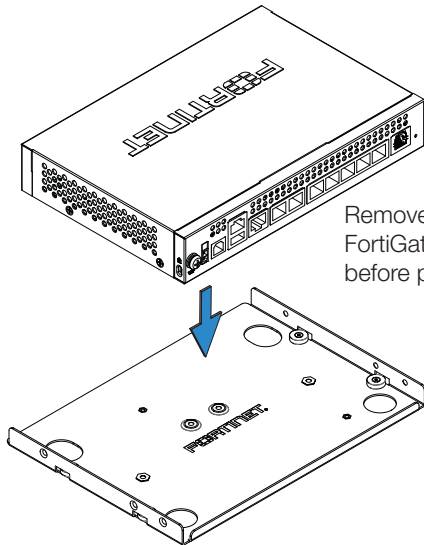

Remove rubber feet from FortiGate G-series devices before placing on bracket.

Optional: If applicable, secure the device sides to the bracket using four 6mm M3 flathead screws or use up to two screws to secure the bottom

- 3 Place device to one side of the tray above the tray magnets.

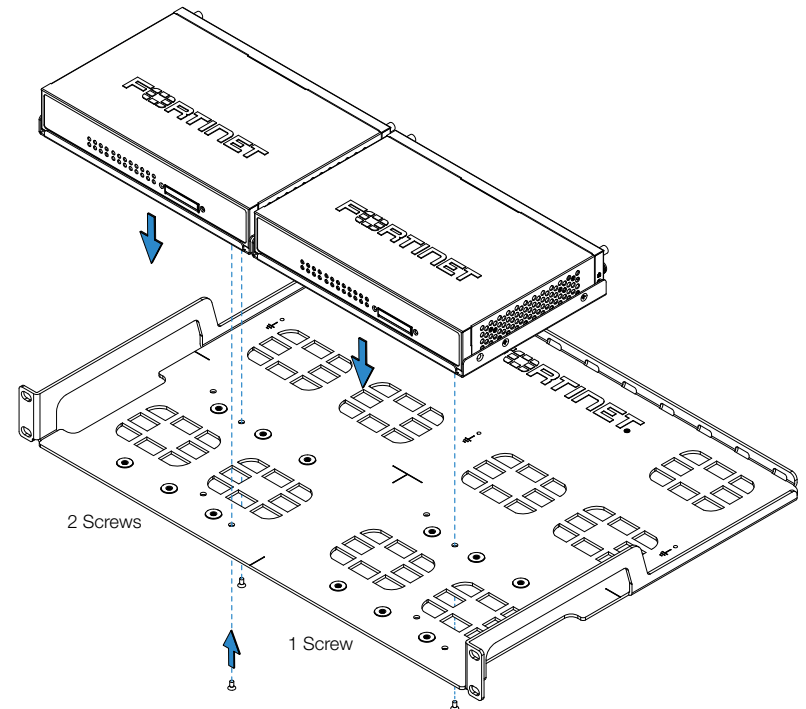


Optional: Secure the device bottom with 6mm M3 flathead screws

- 4 Attach provided grounding wire from the back of the device to the rack mount using a 6mm M3 panhead screw.

Note: The Kensington security slot on the device is not available when the device is installed in the adapter bracket

Rack Installation

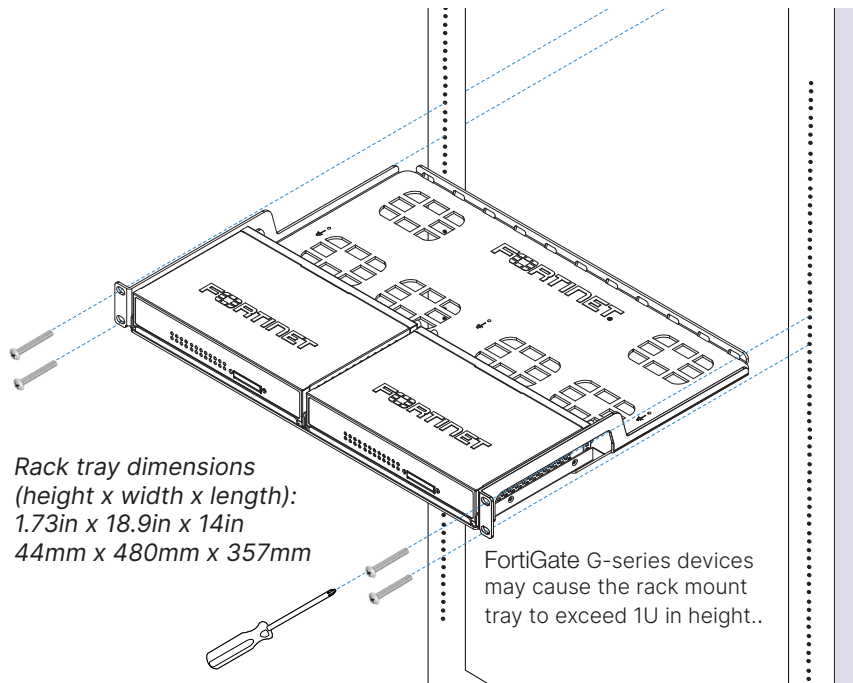

- ❶ Level and line up the rack mount tray ear holes with the rack holes.
- ❷ Finger tighten four rack screws from the rack tray to the rack.
- ❸ Verify that the device is level and there is 1.5 inches of space above and below the device.
- ❹ Tighten the rack screws using a screwdriver.
- ❺ Connect the power and network connections, then secure the power adapter device using the provided cable ties.

Caution: To avoid personal injury or damage to the device, we recommend that two people mount the rack tray on a rack

